

1 Before driving

| | | | |
|--|----|---|----|
| 1-1. Key information | 2 | 1-5. Refueling | 51 |
| Keys | 2 | Opening the fuel tank cap | 51 |
| 1-2. Opening, closing and locking the doors and trunk | 4 | 1-6. Anti-theft system | 54 |
| Smart access system with push-button start | 4 | Engine immobilizer system | 54 |
| Wireless remote control | 16 | Alarm | 56 |
| Doors | 19 | Theft prevention labels (U.S.A.) | 58 |
| Trunk | 23 | 1-7. Safety information | 59 |
| 1-3. Adjustable components | 26 | Correct driving posture | 59 |
| Front seats | 26 | SRS airbags | 61 |
| Driving position memory | 28 | Child restraint systems | 72 |
| Seat position memory | 31 | Installing child restraints | 75 |
| Head restraints | 33 | | |
| Seat belts | 34 | | |
| Steering wheel (manually adjustable type) | 40 | | |
| Steering wheel (power-adjustable type) | 41 | | |
| Anti-glare inside rear view mirror | 42 | | |
| Outside rear view mirrors | 43 | | |
| 1-4. Opening and closing the windows and moon roof | 45 | | |
| Power windows | 45 | | |
| Moon roof | 48 | | |

2 When driving

| | |
|--|-----|
| 2-1. Driving procedures | 86 |
| Driving the vehicle | 86 |
| Starting the engine | 94 |
| Automatic Transmission | 97 |
| Manual Transmission | 101 |
| Turn signal lever | 103 |
| Parking brake | 104 |
| 2-2. Instrument cluster | 105 |
| Gauges and meters | 105 |
| Indicators and warning lights | 111 |
| Multi-information display | 114 |

| | |
|--|------------|
| 2-3. Operating the lights and windshield wipers..... | 118 |
| Headlight switch..... | 118 |
| Fog light switch | 121 |
| Windshield wipers and washer..... | 122 |
| Headlight cleaner switch | 125 |
| 2-4. Using other driving systems.... | 126 |
| Cruise control | 126 |
| Dynamic radar cruise control..... | 129 |
| Lexus parking assist-sensor..... | 138 |
| Driving assist systems..... | 144 |
| PCS (Pre-Collision System)..... | 149 |
| 2-5. Driving information | 152 |
| Cargo and luggage..... | 152 |
| Vehicle load limits..... | 155 |
| Winter driving tips | 156 |
| Trailer towing..... | 161 |
| Dinghy towing (vehicles with an automatic transmission)..... | 162 |
| Dinghy towing (vehicles with a manual transmission)..... | 163 |

3 Interior features

| | |
|--|------------|
| 3-1. Using the air conditioning system and defogger | 166 |
| Automatic air conditioning system..... | 166 |
| Rear window and outside rear view mirror defoggers | 174 |
| 3-2. Using the audio system..... | 175 |
| Audio system type | 175 |
| Using the radio..... | 178 |
| Using the CD player..... | 185 |
| Playing back MP3 and WMA discs..... | 191 |
| Optimal use of the audio system | 199 |
| Using the AUX adapter..... | 202 |
| Using the steering wheel audio switches | 203 |
| 3-3. Using the interior lights..... | 205 |
| Interior lights list..... | 205 |
| • Interior lights and personal lights | 207 |
| 3-4. Using the storage features.... | 209 |
| List of storage features | 209 |
| • Glove box | 209 |
| • Console boxes | 210 |
| • Overhead console | 211 |
| • Cup holders..... | 212 |

| | |
|--|------------|
| • Bottle holders/door pockets | 213 |
| 3-5. Other interior features..... | 215 |
| Sun visors..... | 215 |
| Vanity mirror..... | 216 |
| Clock..... | 217 |
| Satellite switches | 218 |
| Ashtrays | 221 |
| Cigarette lighter | 222 |
| Power outlet..... | 223 |
| Seat heaters..... | 224 |
| Seat heaters and ventilators | 226 |
| Armrest..... | 228 |
| Rear sunshade..... | 229 |
| Extended trunk..... | 231 |
| Coat hooks | 232 |
| Floor mat..... | 233 |
| Trunk features..... | 234 |
| Garage door opener..... | 237 |
| Compass..... | 242 |

4 Maintenance and care

| | |
|--|------------|
| 4-1. Maintenance and care..... | 248 |
| Cleaning and protecting the vehicle exterior..... | 248 |
| Cleaning and protecting the vehicle interior | 250 |

| | |
|--|------------|
| 4-2. Maintenance..... | 253 |
| Maintenance requirements | 253 |
| General maintenance | 255 |
| Emission inspection and maintenance (I/M) programs | 258 |
| 4-3. Do-it-yourself maintenance..... | 259 |
| Do-it-yourself service precautions..... | 259 |
| Hood..... | 262 |
| Positioning the jack | 263 |
| Engine compartment..... | 265 |
| Tires | 279 |
| Tire inflation pressure..... | 289 |
| Wheels..... | 293 |
| Air conditioning filter..... | 295 |
| Electronic key battery | 297 |
| Checking and replacing fuses..... | 299 |
| Headlight aim..... | 313 |
| Light bulbs | 314 |

5 When trouble arises

| | |
|---|------------|
| 5-1. Essential information..... | 322 |
| If your vehicle needs to be towed | 322 |
| If you think something is wrong | 329 |

Fuel pump shut off system 330

Event data recorder 331

5-2. Steps to take in an emergency..... 333

 If a warning light turns on or a warning buzzer sounds..... 333

 If a warning message is displayed..... 338

 If you have a flat tire..... 352

 If the engine will not start 360

 If the shift lever cannot be shifted from P..... 361

 If you lose your keys 362

 When the electronic key battery is discharged 363

 If the vehicle battery is discharged 366

 If your vehicle overheats 369

 If the vehicle becomes stuck..... 371

6 Vehicle specifications

6-1. Specifications..... 374

 Maintenance data..... 374

 Fuel information..... 389

 Tire information..... 392

6-2. Customization 400

 Customizable features 400

6-3. Initialization 404

 Items to initialize 404

7 For US owners

Reporting safety defects for U.S.A. owners..... 406

Index

Alphabetical index.....408

What to do if..... 417

1

2

3

4

5

6

7